

FIG. 1

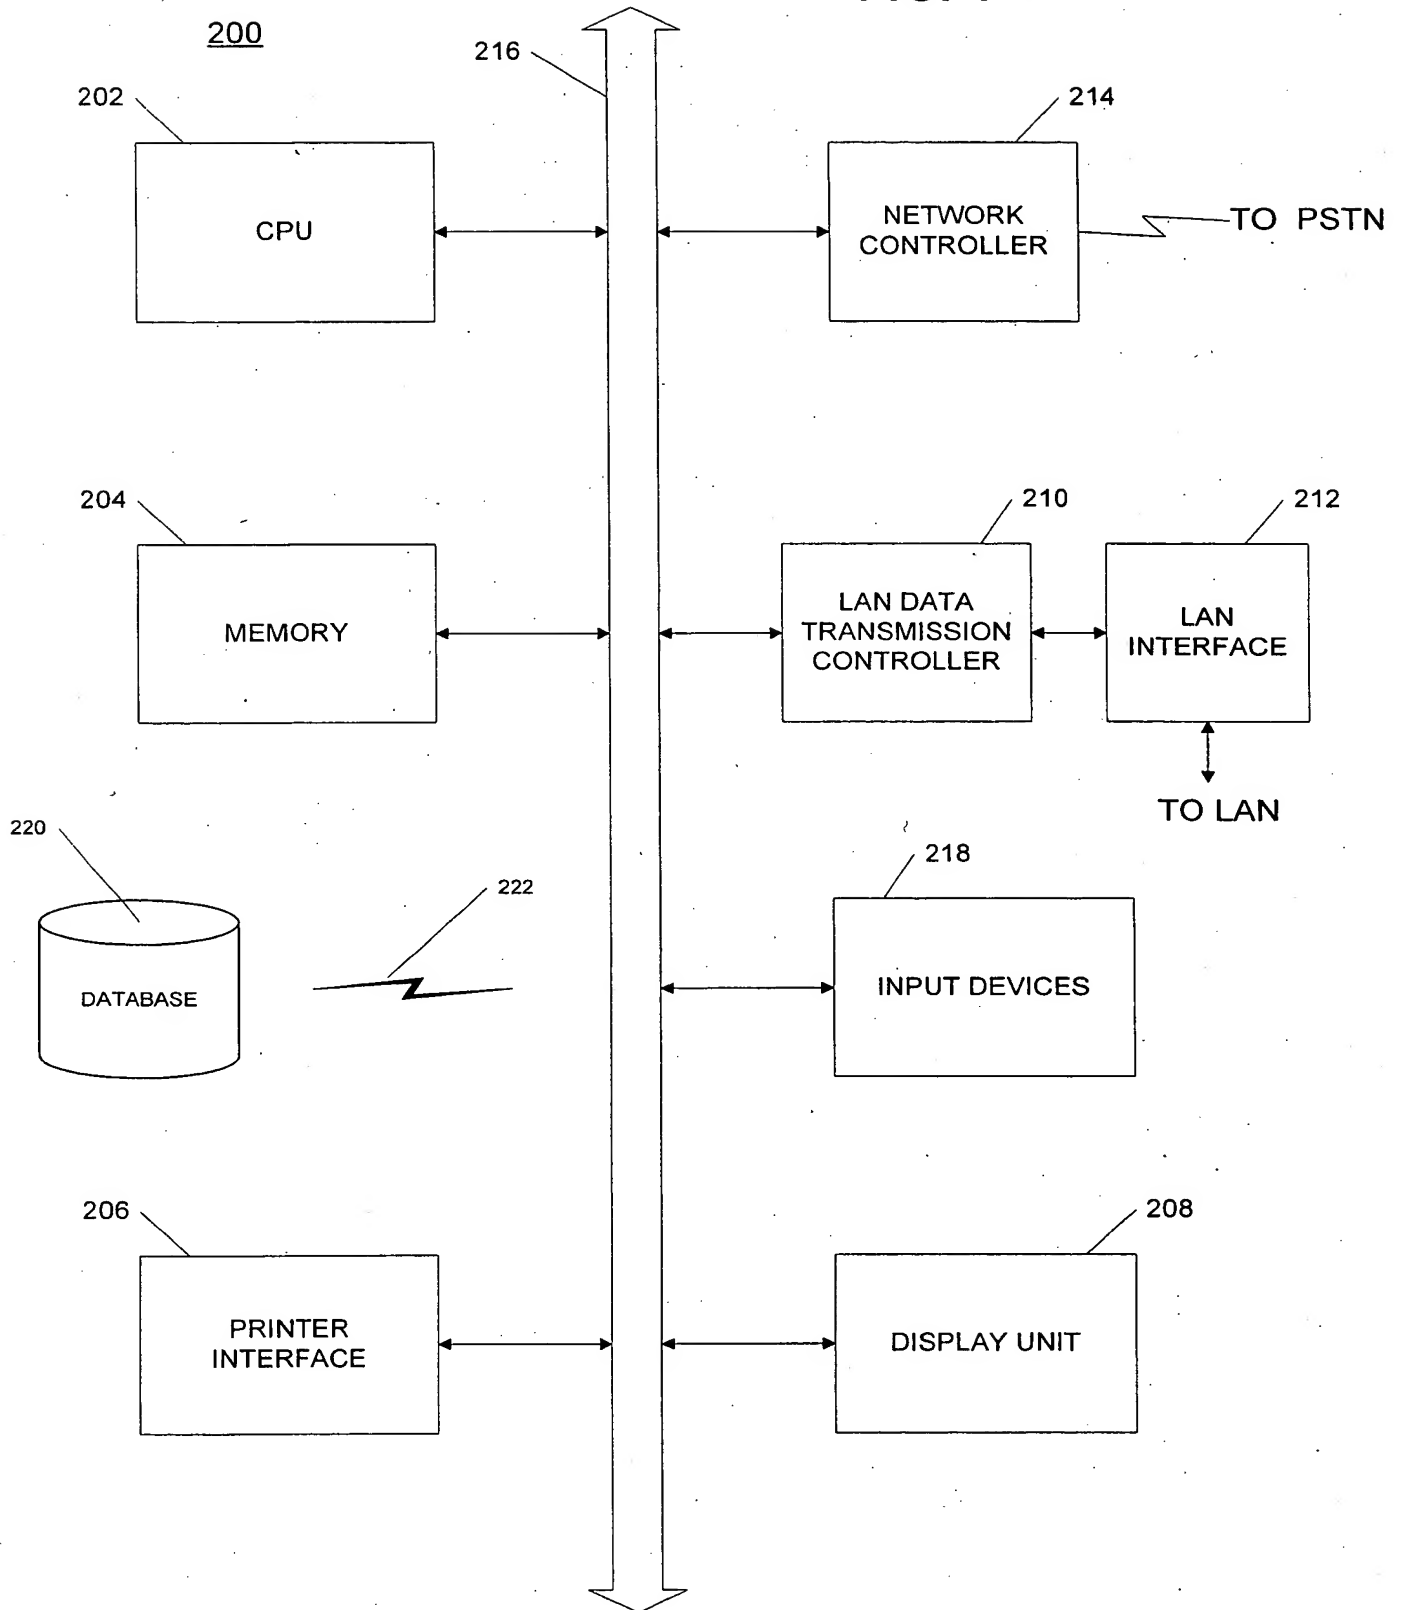


FIG 2

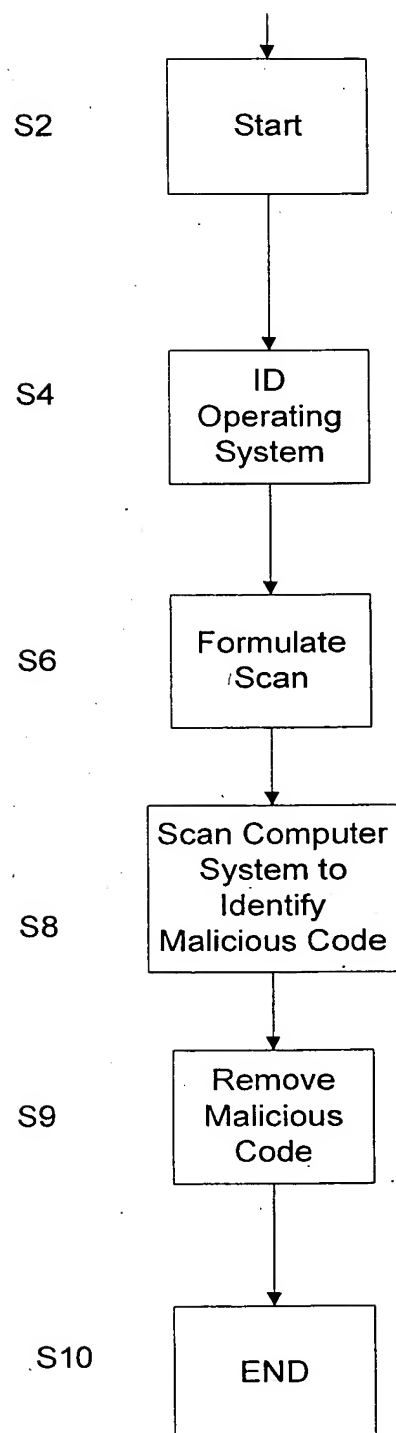


FIG. 3

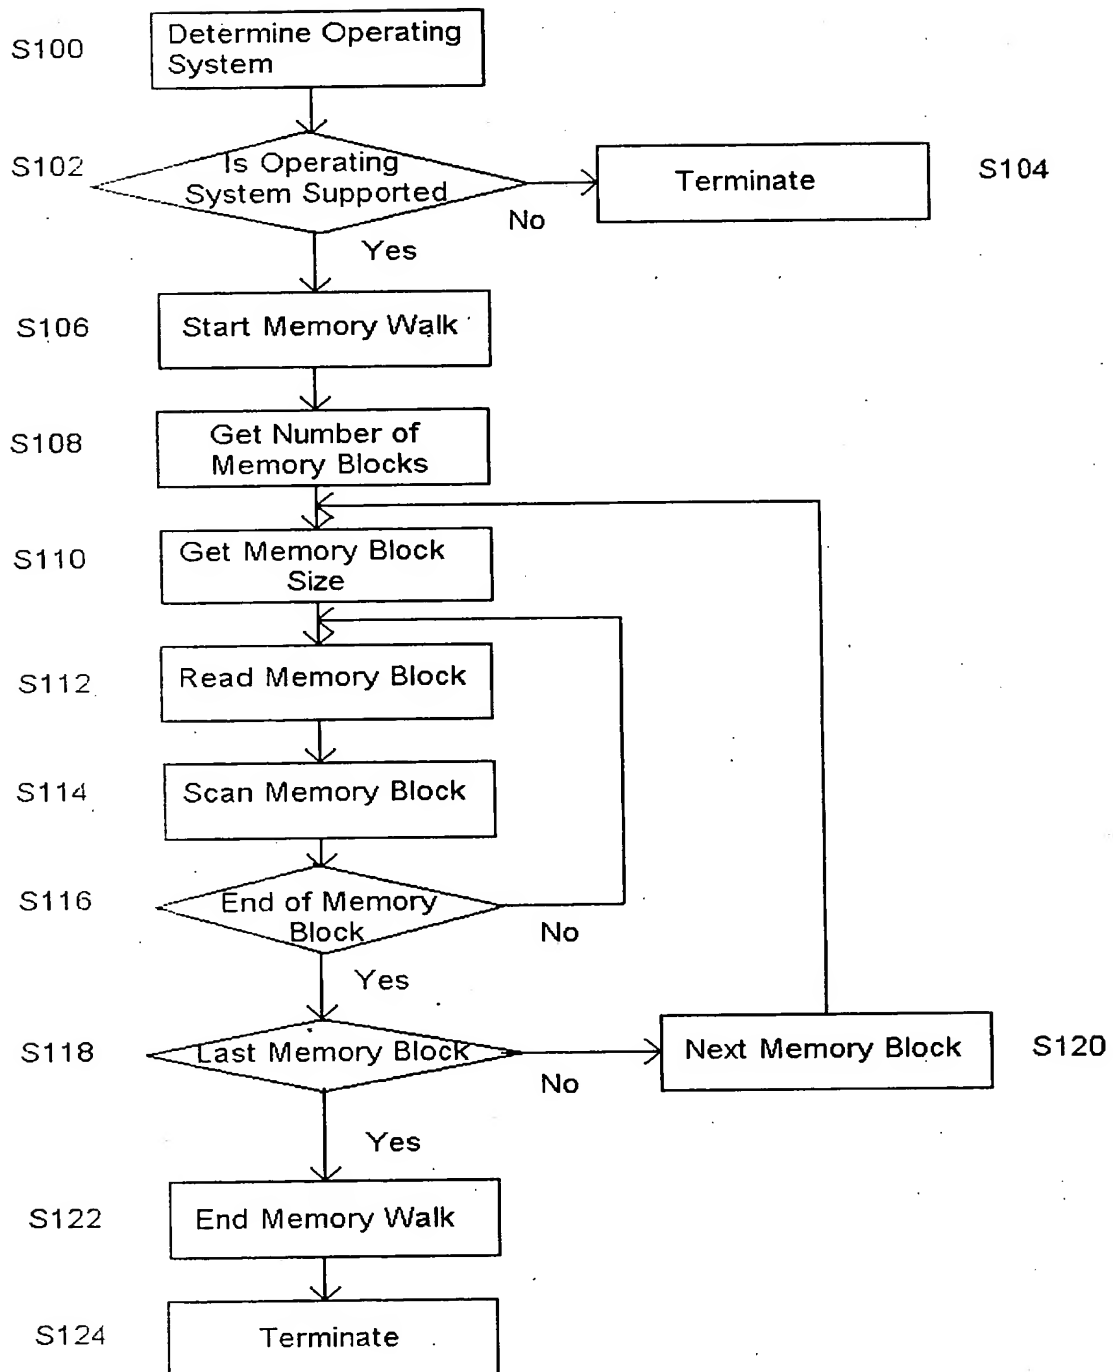


FIG. 4

Memory Location	Contents
00000:	Interrupt Vector
00400:	Bios Data
00700:	DOS Area DOS MCB's
9FFFF:	DOS End
A0000:	Upper Memory
F0000:	Bios Code
FFFFFF:	1MB Limit High Memory Start
10000 + 64 KB	High Memory End Extended Memory Start

FIG 5


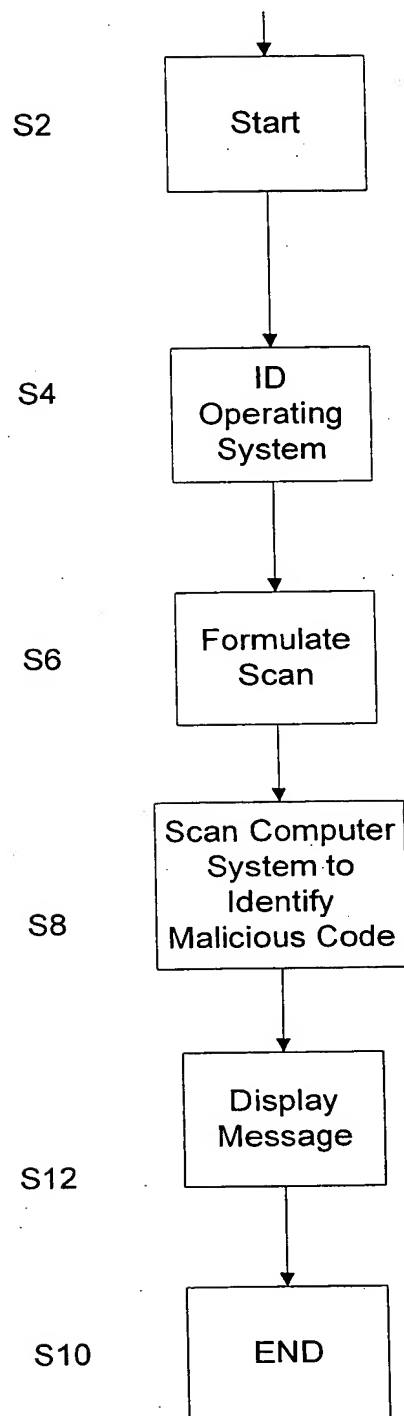


FIG 6

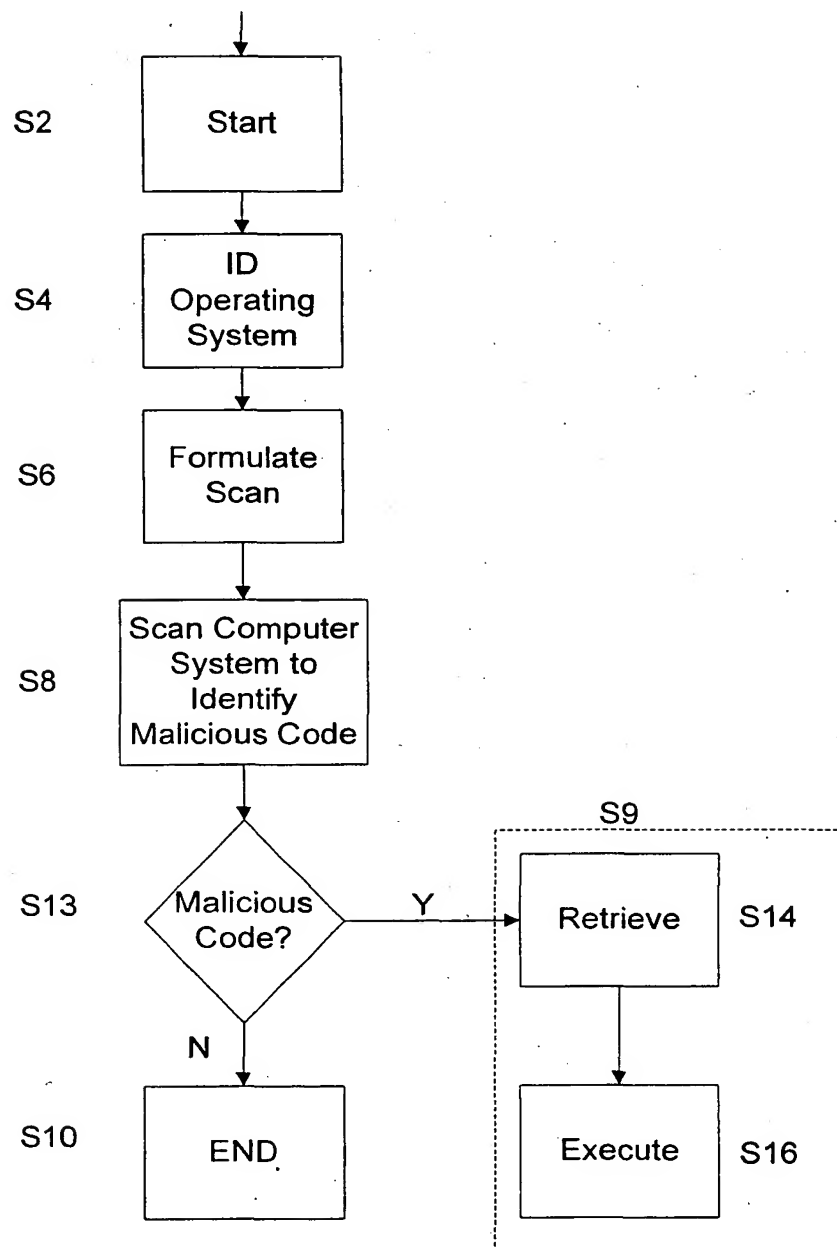

S18

FIG. 7

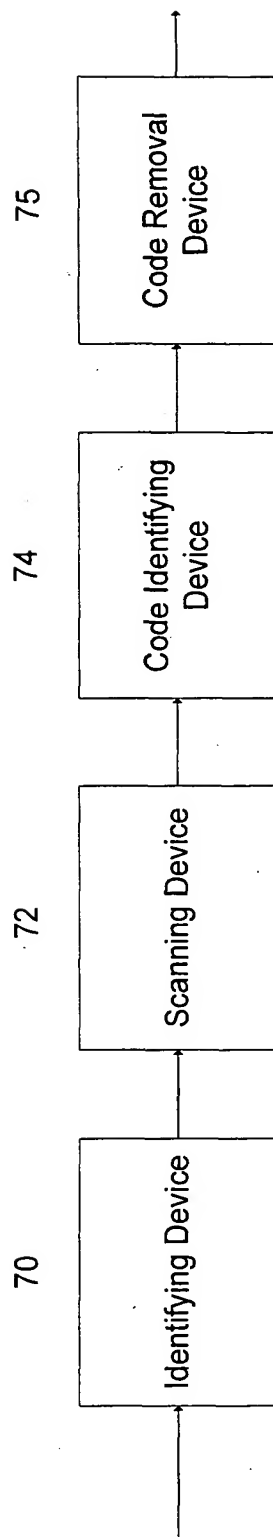


FIG. 8

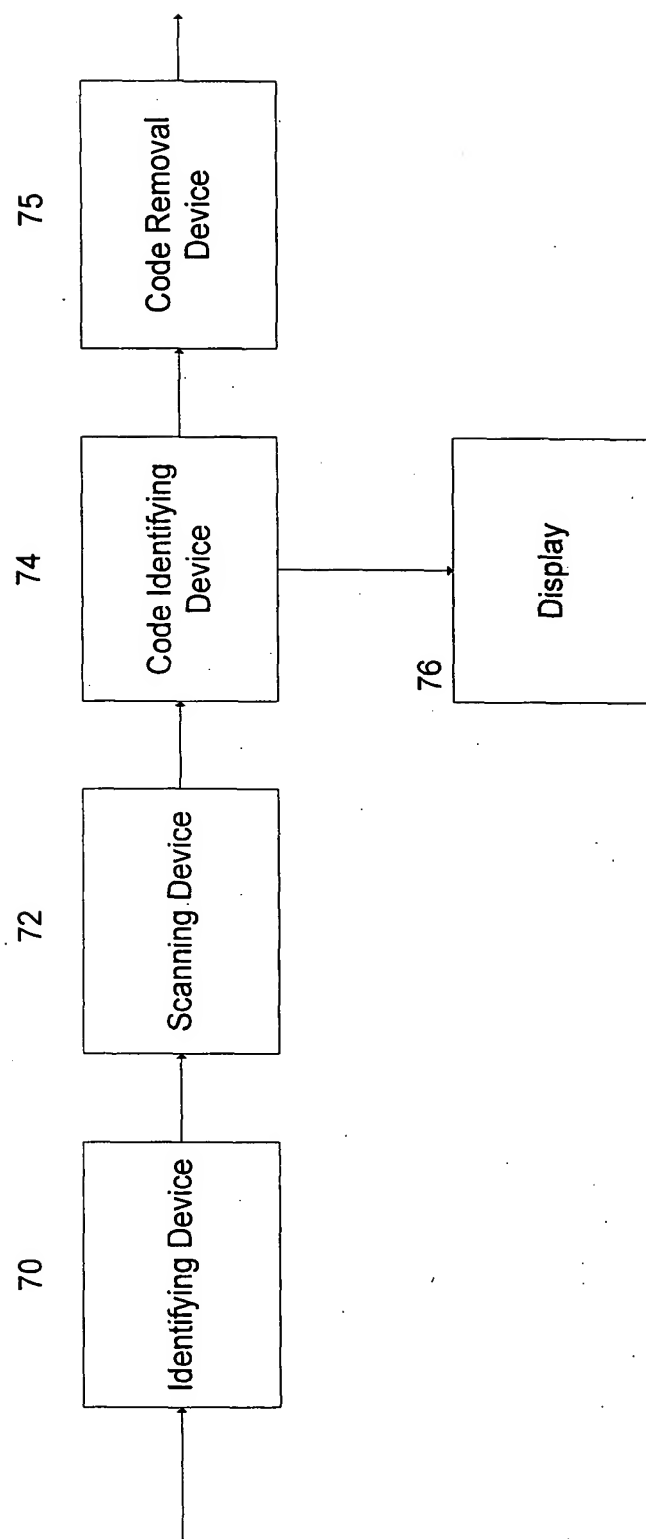


FIG. 9

